


WIRING DIAGRAM

Power Extender Kit thermostat wiring

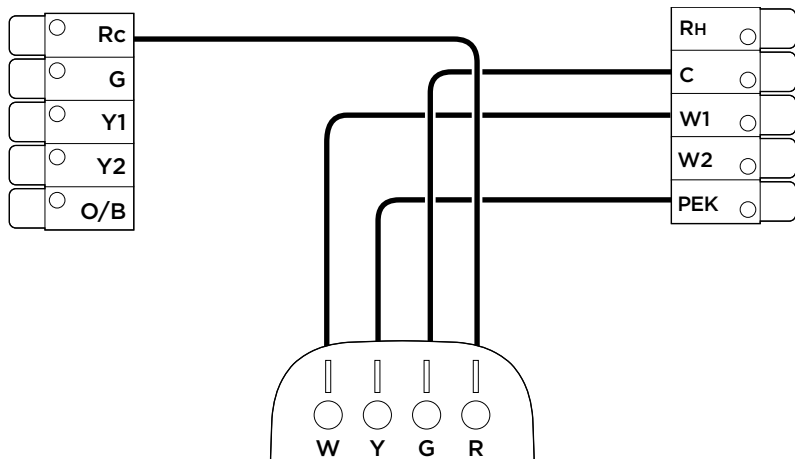

Power Extender Kit
(at your HVAC system)

NOTE:

Do not jumper Rc or Rh. ecobee does this automatically. The R wire needs to go into the Rc terminal on your ecobee.